

# REPLACEMENT RETINA INSTALLATION

## 1: DISASSEMBLY

REMOVE THREADED COLLAR & EYEBALL CENTER.



## 2: INSERT THE iBOOST PRO RETINA

INSERT THE iBOOST PRO RETINA INTO THE EXISTING EYEBALL HOUSING.

**IMPORTANT:**

ENSURE THE iBOOST VALVE IS FACING OUTWARD.



## 3: ATTACH THREADED COLLAR

1. RE-ATTACH THE THREADED COLLAR ONTO THE EYEBALL ASSEMBLY.
2. POSITION iBOOST PRO RETINA IN DESIRED LOCATION AND TIGHTEN THREADED COLLAR TO FIX INTO POSITION.




## PRODUCT SUPPORT & INFORMATION

For the most up to date installation information and contact information for assistance in your region, please visit [www.spaelectrics.com](http://www.spaelectrics.com)

# COMPLETE EYEBALL INSTALLATION

## 1: DISASSEMBLY

REMOVE THREADED COLLAR & EYEBALL CENTER.

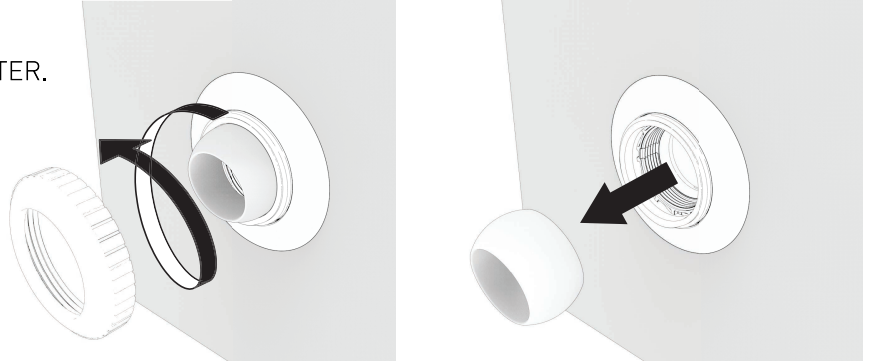


## 2: REMOVE EYEBALL HOUSING

UNTHREAD THE EYEBALL HOUSING FROM THE POOL WALL.

**NOTE:**

A TOOL MAY BE REQUIRED TO PROVIDE SUFFICIENT LEVERAGE.  
REFER TO MANUFACTURERS SPECIFICATIONS FOR MORE INFORMATION.

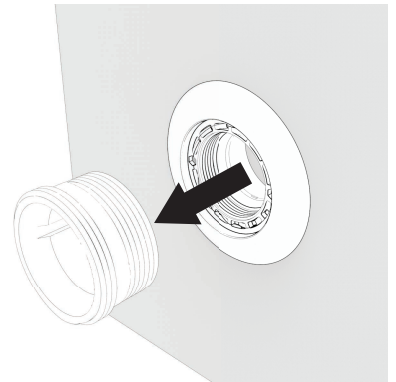


## 3: INSTALL iBOOST PRO FITTING

INSERT iBOOST PRO FITTING INTO EXISTING COUPLING AND TIGHTEN THREAD BY HAND.

**NOTE:**

TO REPOSITION RETINA, LOOSEN THREADED COLLAR.

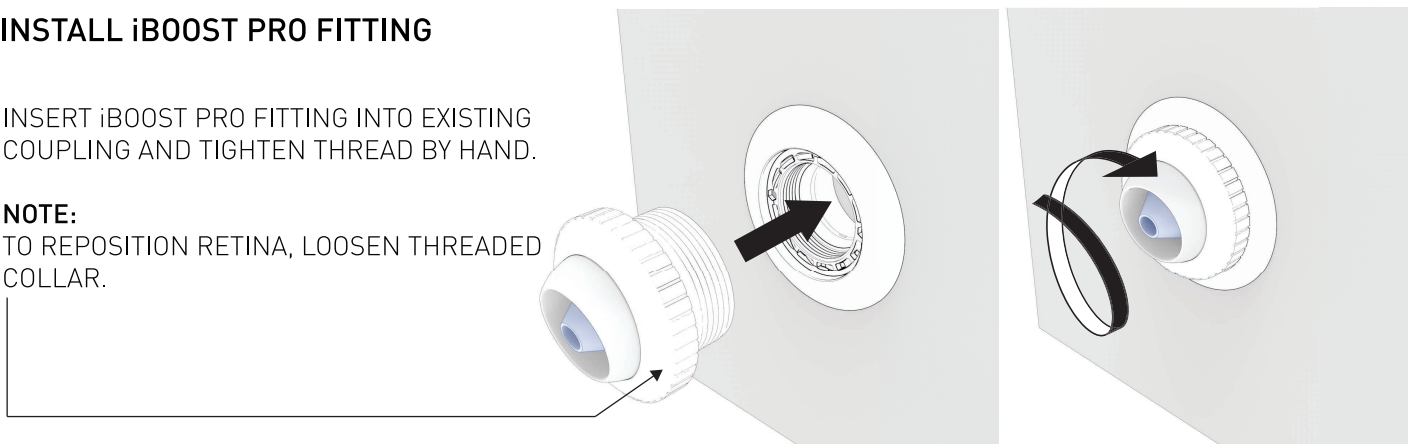

## PRODUCT SUPPORT & INFORMATION

For the most up to date installation information and contact information for assistance in your region, please visit [www.spaelectrics.com](http://www.spaelectrics.com)